



Wiko
SHARE YOUR IDENTITY

SLIDE™

คู่มือผู้ใช้

เนื้อหาในคู่มือนี้อาจแตกต่างจากผลิตภัณฑ์ของจริง ขึ้นกับ
เวอร์ชันซอฟต์แวร์ และผู้ให้บริการของคุณ

TH

ขอแสดงความยินดี !

คุณได้ซื้อโทรศัพท์มือถือ WIKO SLIDE เราหวังว่าคุณจะทำความคุ้นเคยกับการใช้ WIKO ด้วยตัวเองอย่างรวดเร็วจากคู่มือนี้

สงวนลิขสิทธิ์ © 2014 WIKO

www.wikomobile.com

ไม่อนุญาตให้คัดลอก ทำซ้ำ หรือแจกจ่าย คู่มือนี้ในรูปแบบใดๆ โดยไม่ได้รับความยินยอม เป็นลายลักษณ์อักษรจาก WIKO

เครื่องหมายการค้าจดทะเบียน

WIKO เป็นเครื่องหมายการค้าจดทะเบียนของ WIKO.

หมายเหตุ

WIKO สงวนลิขสิทธิ์ในการแก้ไขข้อมูลในคู่มือ โดยไม่ต้องแจ้งล่วงหน้า

WIKO จัดเตรียมคู่มือนี้ด้วยความระมัดระวัง

อย่างไรก็ตามข้อมูลและเนื้อหาไม่ได้เป็นการรับประกัน แต่อย่างไร

ข้อจำกัดการรับผิดชอบ

ข้อมูลและบริการทั้งหมดผ่านอุปกรณ์นี้ เป็นทรัพย์สินของบุคคลที่สาม ได้รับการปกป้องตามกฎหมาย (ลิขสิทธิ์ สิทธิบัตร ใบอนุญาต และกฎหมายทรัพย์สินทางปัญญาอื่น) ให้ใช้บริการเหล่านี้เป็นการส่วนตัว อย่าใช้เพื่อการค้า ห้ามคัดลอก แจกจ่าย โอน หรือขาย ข้อมูลและบริการผ่านสื่อใดๆ ด้วยอุปกรณ์ หรือผ่านอุปกรณ์นี้

ข้อมูลและบริการของบุคคลที่สามมิให้โดย WIKO ไม่ได้รับประกันความเหมาะสม ความถูกต้อง ความสมเหตุสมผล ข้อกำหนด การละเลย การละเมิด หรือความครบถ้วนของข้อมูลและบริการในอุปกรณ์นี้ ไม่ว่าทางตรงหรือทางอ้อม WIKO ไม่ต้องรับผิดชอบความเสียหาย ค่าทนาย ค่าใช้จ่าย และความเสียหายอื่นใด ทั้งทางตรงหรือทางอ้อม อันเกิดจากข้อมูลหรือบริการที่คุณหรือบุคคลอื่นเป็นผู้ใช้ แม้ว่า WIKO จะทราบถึงข้อจำกัดแล้วก็ตาม ในบางประเทศที่ไม่ อนุญาตให้มีข้อยกเว้นการรับประกัน หรือมีข้อจำกัดด้านกฎหมายสิทธิผู้บริโภคดังนั้นข้อจำกัดและ ข้อยกเว้นนี้อาจไม่ส่งผลกับคุณ

บริการของบุคคลที่สามอาจขัดข้อง หรือหยุดลงเมื่อไรก็ได้ WIKO ไม่รับประกันว่าข้อมูลหรือบริการเหล่านี้จะ ใช้ได้ตลอดไป WIKO ไม่สามารถควบคุมข้อมูลและ บริการของบุคคลที่สาม ที่รับส่งผ่านเครือข่ายได้

WIKO ไม่รับผิดชอบจากความขัดข้องหรือการหยุดให้ข้อมูลหรือบริการใดๆ บนอุปกรณ์นี้

WIKO ไม่ได้รับผิดชอบงานสนับสนุนที่เกี่ยวข้องกับข้อมูลและบริการ หากมีคำถามหรือข้อสงสัยเรื่อง ข้อมูลและบริการ ให้ส่งตรงไปให้ผู้ผลิตข้อมูล หรือบริการนั้นๆ




อุปกรณ์ในกล่อง :

1. โทรศัพท์มือถือ WIKO SLIDE
2. แดปเตอร์ไฟ
3. สายไมโครยูเอสบี
4. แบตเตอรี่
5. ชุดหูฟัง
6. คู่มือผู้ใช้

ชื่อและหน้าที่ของส่วนต่างๆ




~ ปุ่มบนโทรศัพท์

ปุ่ม	หน้าที่
On/Off	กดปุ่มค้างไว้เพื่อเปิดหรือปิดโทรศัพท์ กดปุ่มสั้นๆเพื่อล็อคหน้าจอทัชสกรีน
Home 	ไปหน้าโฮมสกรีน กดค้างปุ่มนี้เพื่อแสดงรายการแอปพลิเคชันที่เคยใช้
Menu 	แสดงเมนูตัวเลือกของแอปพลิเคชันปัจจุบัน
Return 	ย้อนกลับหน้าจอที่แล้ว ปิดแป้นพิมพ์
VOLUME + / -	เพิ่มหรือลดความดังเสียงสนทนา วิดีโอ ดนตรี เกมส์ และฟังก์ชั่นเสียง ปิดเสียงริงโทนขณะมีเสียงเรียกเข้า กดค้างปุ่ม - เพื่อเปิดใช้โปรไฟล์ประชุม (meeting)

เริ่มต้นใช้งาน

~ ใส่ซิมการ์ด


SLIDE : ฝาหลังของโทรศัพท์ที่มีขอยื่นอยู่ ให้เริ่มแกะจากร่องที่ฝา
ไล้ไปตามขอบโทรศัพท์ ให้ใส่ซิมการ์ด ตามภาพด้านล่าง

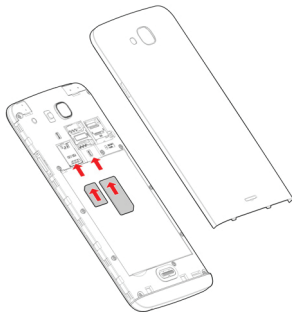

ติดตั้งแบตเตอรี่

หมายเหตุ : ให้ใช้แบตเตอรี่ และที่ชาร์จที่ WIKO
กำหนดเท่านั้น

ใส่แบตเตอรี่ในช่อง จัดให้หน้าสัมผัสแบตเตอรี่ตรงกับช่องโทรศัพท์
แล้วกดแบตเตอรี่เบาๆ จนลงในช่อง

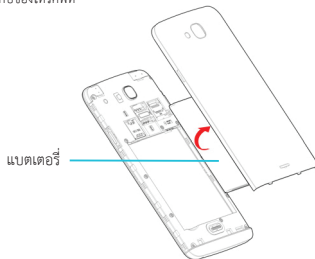


การชาร์จแบตเตอรี่

ไฟสถานะสีแดงกระพริบ หมายถึงแบตเตอรี่มีระดับต่ำมาก ควรจะชาร์จแบตเตอรี่ เพราะถ้าระดับต่ำเกินไป แบตเตอรี่จะมีอายุสั้นลง
ต่อที่ชาร์จเข้าปลั๊กไฟและใช้สายไมโครยูเอสบี ต่อเข้าช่องไมโครยูเอสบีของโทรศัพท์

ไฟสถานะเปลี่ยนเป็นสีแดง หมายถึงกำลังชาร์จอุปกรณ์ หลังจากชาร์จ เต็มแล้ว ไฟสถานะเปลี่ยนจะเป็นสีเขียว ควรถอดสายที่ชาร์จออก

ให้ดูข้อมูลเพิ่มเติมจากหัวข้อข้อมูลความปลอดภัย

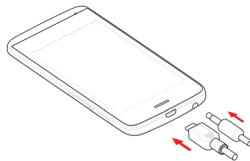


~ ติดตั้งการ์ดหน่วยความจำ

โทรศัพท์ของคุณรองรับไมโครเอสดีขนาด 32GB

วิธีติดตั้งการ์ดหน่วยความจำ ให้ปิดโทรศัพท์แล้วถอด ฝาหลัง และแบตเตอรี่ออก จากนั้นใส่การ์ดหน่วยความจำลงในช่อง

ช่องใส่การ์ดหน่วยความจำ

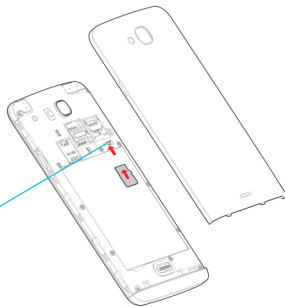

เปิดและปิดโทรศัพท์

วิธีเปิดโทรศัพท์ ให้กดปุ่ม ON/OFF ค้างไว้จนกว่าโทรศัพท์สั่น

หากคุณลืดอกิมการ์ดเอาไว้ ขณะเปิดโทรศัพท์ให้ป้อนรหัสพินที่ถูกต้องเพื่อปลดล็อก รหัสพินนี้ผู้ให้บริการเป็นคนกำหนด หากคุณไม่มีหรือทำรหัสหาย ให้ติดต่อผู้ให้บริการ หากป้อนรหัสพินผิดสามครั้ง โทรศัพท์จะล็อก คุณต้องใช้รหัส PUKเพื่อปลด (รหัสมาพร้อมกับซิมการ์ด) หากคุณไม่มีให้ติดต่อผู้ให้บริการมือถือ)

วิธีปิดโทรศัพท์ ให้กดปุ่ม ON-OFF ค้างจนมีเมนูแสดง แล้วกดปิดเครื่อง (Switch Off) จากนั้นกด OK ยืนยัน

โทรศัพท์จะสั่นเมื่อปิดเครื่องเสร็จ

การใช้งานพื้นฐาน

~ การจัดการซิม

เมื่อคุณเปิดโทรศัพท์ครั้งแรก โทรศัพท์จะแสดงข้อมูลซิมการ์ด และให้กำหนดซิมสำหรับโทร ส่งข้อความ และต่ออินเทอร์เน็ต การเชื่อมต่อข้อมูล จะใช้ซิม 1 เป็นค่าเริ่มต้น


หากค่าเริ่มต้นถูกต้องแล้ว ให้กด ปัด ถ้าจะเปลี่ยนแปลงให้กด เลือก เพื่อแสดงเมนู การจัดการซิม จากนั้นคุณสามารถ :

1. ใน SIM INFO กำหนดข้อมูลซิมการ์ด ตั้งสีพื้นหลังของซิม ทั้งสองให้แตกต่างกัน
2. กำหนด ซิมเริ่มต้น* สำหรับสนทนาและวิดีโอ, SMS/MMS และการเชื่อมต่ออินเทอร์เน็ต

*คุณยังสามารถเลือกซิมอื่นได้ เช่นก่อนโทรหรือก่อนส่ง SMS/MMS ให้ลากหน้าต่างแจ้งเตือนลงมาด้านล่าง และเลือกซิมที่ต้องการ ซิมเริ่มต้นจะมีเส้นใต้ขีดไว้ ถ้าคุณเลือก <ถามเสมอ>เวลาเข้า เมนูโทร หรือ SMS/MMS จะมีไอคอน ให้เห็นได้ชัดจากสัญลักษณ์ความแรงสัญญาณ

~ การเชื่อมต่อเครือข่าย

เมื่อเปิดโทรศัพท์เป็นครั้งแรกหรือมีการเปลี่ยนซิมและรีสตาร์ท โทรศัพท์จะแสดงเมนูตั้งค่าจุดเข้าใช้งาน (Access point) ให้กด เลือก

กดที่ชื่อของซิมการ์ด เพื่อแสดงรายการจุดเข้าใช้งาน (access point) กดปุ่มด้านขวาให้ตรงกับผู้ให้บริการของคุณ แล้วกด  RETURN เพื่อกลับไปเมนูก่อนหน้า

- **ไม่มี APN**

หากไม่มีรายการเลย หรือไม่มีผู้ให้บริการของคุณให้เลือกให้สอบถามค่า APN จากผู้ให้บริการของคุณ วิธีป้อนค่าให้กดปุ่มเมนูเลือก APN ใหม่ และป้อนข้อมูลตามที่ผู้ให้บริการให้มา กดปุ่มเมนูอีกครั้ง และเลือก บันทึก กลับไปเมนูก่อนหน้านี้ แล้วเลือก APN ที่คุณเพิ่งบันทึกไว้

- **เปิดใช้การเชื่อมต่อข้อมูล**

ตรวจสอบการตั้งค่าการเชื่อมต่อข้อมูล :

1. ไปหัวข้อ *การตั้งค่า > บริการไร้สาย & เครือข่าย > อื่นๆ > เครือข่ายโทรศัพท์มือถือ > ซ็อกเก็ตใช้งาน* แล้วเลือกซ็อกเก็ตใช้งานให้ตรงตามผู้ให้บริการ

2. กลับไป **เมนูตั้งค่า** เครือข่ายโทรศัพท์มือถือ แล้วเลือกการเชื่อมต่อข้อมูล และเลือกซิมการ์ด เพื่อเปิดใช้งาน

*คุณสามารถลากหน้าต่างแจ้งเตือนลงมาเพื่อเปิดการเชื่อมต่อข้อมูลก็ได้

- **บริการ 3G**

ถ้าคุณใส่ซิมการ์ดสองช่อง บริการ 3G จะใช้ได้กับซิมการ์ดเดียวเท่านั้น เพื่อให้ได้ประสิทธิภาพสูงสุด ควรจะเปิดใช้ซิม 1 วิธีเปลี่ยนซิม ให้กด *ตั้งค่า > บริการไร้สายและเครือข่าย > อื่นๆ > เครือข่ายโทรศัพท์มือถือ > บริการ 3G > เปิดทำงาน 3G*

- **โรมมิ่งข้อมูล**

สำหรับซิมที่ใช้โรมมิ่งได้ คุณต้องเปิดใช้งานโรมมิ่งข้อมูล ในเมนู *ตั้งค่า > การจัดการซิม > การตั้งค่าทั่วไป > โรมมิ่ง* มิฉะนั้นจะเชื่อมต่ออินเทอร์เน็ตไม่ได้

การแจ้งเตือน

ไอคอนการแจ้งเตือนบนแถบสถานะ



ความแรงสัญญาณ

G

เชื่อมต่อ GPRS

E

เชื่อมต่อ EDGE

3G

เชื่อมต่อ 3G

H

เชื่อมต่อ HSPA (3G+)

H+

เชื่อมต่อ HSPA+ (3G++)



ไม่มีสัญญาณ

R

โรมมิ่ง



มีสัญญาณ W-Fi



เชื่อมต่อ Wi-Fi



เปิดบลูทูธ



ใช้งาน GPS



กำลังใช้สายสนทนา



รอสาย



สายไม่ได้รับ



กำลังซิงค์



มีอีเมลใหม่



เปิดนาฬิกาปลุก



โหมดเงียบ



มีวอยซ์เมลี่ใหม่



กำลังดาวน์โหลด



เชื่อมต่อคอมพิวเตอร์



ระดับแบตเตอรี่



มีข้อความ SMS หรือ MMS ใหม่





โหมดใช้งานบนเครื่องบิน

การแจ้งเตือนอาจมีเสียง สั่น หรือไฟ LED กระพริบ
ร่วมด้วยในบางแอปพลิเคชัน

หน้าต่างแจ้งเตือน

ให้ลากแถบสถานะจากด้านบนลงมาเพื่อดูการแจ้งเตือนทั้งหมด
ใช้นิ้วเลื่อนโฮมสกรีนส่วนใดก็ได้ขึ้นข้างบน เป็นการแสดงข้อความ
ใหม่ การนัดหมาย การดาวน์โหลด ฯลฯ ด้านล่างเป็นข้อมูลให้
บริการ

กด  เพื่อลบการแจ้งเตือนชั่วคราวทั้งหมด (แอปพลิเคชันที่
กำลังทำงานจะยังอยู่) ลากการแจ้งเตือนไปทางซ้ายหรือขวาเพื่อ
ลบ วิธีปิดหน้าต่างให้เลื่อนขึ้น หรือกด RETURN .

วิธีเข้าหน้าต่างตั้งค่า ให้กด



วิธีลัด : ใช้สองนิ้วดึงการแจ้งเตือนลงมา

~ การใช้เมนู

ในโทรศัพท์มีเมนูสองชนิด คือเมนูเนื้อหา
และเมนูตัวเลือก

เมนูเนื้อหา (Contextual Menu)

วิธีเรียกเมนูเนื้อหา ให้แตะค้างรายการบนหน้าจอ : เป็นการเรียก
เมนูที่เกี่ยวข้องของรายการนั้นขึ้นมา เช่นถ้าคุณแตะค้างที่ SMS
จะมีตัวเลือกของข้อความแสดงขึ้นมา

หมายเหตุ: รายการบางตัวไม่มีเมนูเนื้อหา ถ้าคุณแตะค้างที่
รายการแล้วไม่เกิดอะไร แสดงว่ารายการนั้นไม่มีเมนูเนื้อหา

เมนูตัวเลือก (Options Menu)

วิธีเรียกเมนูตัวเลือก กดปุ่ม MENU 

เมนูตัวเลือกเป็นการทำงานหรือการตั้งค่าของหน้าจอปัจจุบัน
หรือของแอปพลิเคชันนั้นๆ แต่ไม่เจาะจงรายการเหมือนเมนู
เนื้อหา

หมายเหตุ: บางหน้าจอไม่มีเมนูตัวเลือก

ข้อมูลความปลอดภัย

เพื่อใช้โทรศัพท์ของคุณได้อย่างปลอดภัย โปรดอ่านข้อมูลความปลอดภัยให้ละเอียด:

- 1. เด็ก :** ระวังเด็กและโทรศัพท์ของคุณ
โทรศัพท์มือถือมีชิ้นส่วนถอดได้หลายชิ้น ให้ระมัดระวังเมื่อเด็กเข้าใกล้โทรศัพท์ เพราะอาจจะกลืนชิ้นส่วน โทรศัพท์เข้าไป และหายใจติดขัด ถ้าโทรศัพท์ของคุณมีกล้องหรือไฟแฟลชอย่าใช้ใกล้เด็กหรือสัตว์เลี้ยง
- 2. การได้ยิน :** การใช้หูฟังเปิดเสียงดังสุดเป็นเวลานาน อาจทำให้หูพิการได้ ให้ลดความดังจนต่ำสุดเท่าที่พอ สำหรับฟังหรือสนทนา หลีกเลี่ยงการเปิดเสียงดังเป็นเวลานาน
- 3. การขับขี่ :** ให้ระมัดระวังขณะขับขี่ การขับขี่พาหนะต้องมีสมาธิสูง ตลอดเวลาเพื่อลดความเสี่ยงจากอุบัติเหตุ การใช้โทรศัพท์มือถือจะทำให้เสียสมาธิและเกิดอุบัติเหตุได้ ให้ปฏิบัติตามกฎหมายท้องถิ่นว่าด้วย การใช้โทรศัพท์เคลื่อนที่ขณะขับขี่พาหนะอย่างเคร่งครัด ห้ามใช้โทรศัพท์ขณะขับขี่ ไม่ควรเสี่ยงด้วยการใช้ชุดหูฟังแทน

- การบิน :** ให้ปิดโทรศัพท์ขณะโดยสารด้วยเครื่องบิน
ให้ปิดโทรศัพท์ทุกครั้งเมื่ออยู่ในเครื่องบิน (GSM + บลูทูธ)
เพราะอาจรบกวนการทำงาน
- 4. โรงพยาบาล :** ปิดโทรศัพท์เมื่ออยู่ใกล้อุปกรณ์การแพทย์
การเปิดโทรศัพท์เมื่ออยู่ใกล้อุปกรณ์การแพทย์เป็นอันตรายมาก เพราะอาจรบกวนการทำงาน ให้ปฏิบัติตามคำแนะนำหรือคำเตือนของโรงพยาบาล หรือสถานพยาบาล ให้ปิดโทรศัพท์เมื่ออยู่ในบิมน้ำมัน ห้ามใช้อุปกรณ์เมื่อเข้าใกล้น้ำมันเชื้อเพลิง
- การใช้โทรศัพท์ในอุ้งรถเป็นอันตราย**

5. **เครื่องกระตุ้นหัวใจอิเล็กทรอนิกส์** : ผู้ใช้เครื่องกระตุ้นหัวใจอิเล็กทรอนิกส์ ให้ถือโทรศัพท์สันทนาในด้านตรงข้ามกับเครื่องกระตุ้นหัวใจ

หากพบว่าโทรศัพท์รบกวนการทำงานเครื่องกระตุ้นหัวใจให้ปิดอุปกรณ์ทันที และติดต่อผู้ขายเครื่องกระตุ้นหัวใจเพื่อขอคำแนะนำต่อไป

6. **ความเสี่ยงจากไฟ** : อย่าวางอุปกรณ์ใกล้แหล่งกำเนิดความร้อน เช่น หม้อน้ำหรือเตา อย่าชาร์จไฟใกล้วัตถุติดไฟง่าย เพราะมีความเสี่ยงจากไฟไหม้

7. **ของเหลว** : อย่าให้โทรศัพท์โดนน้ำหรือของเหลว อย่าจับโทรศัพท์ด้วยมือเปียก : น้ำอาจทำความเสียหายจนไม่อาจซ่อมแซมได้

8. **ใช้อุปกรณ์เสริมที่ WIKO แนะนำ** การใช้อุปกรณ์เสริมอื่นที่ไม่แนะนำ อาจเป็นอันตรายกับโทรศัพท์ หรืออาจไม่ปลอดภัย

9. **อย่าทำลายแบตเตอรี่และที่ชาร์จ** อย่าใช้แบตเตอรี่ หรือที่ชาร์จชำรุด เก็บแบตเตอรี่ให้ห่างจากวัตถุที่เป็นแม่เหล็ก เพราะอาจทำให้แบตเตอรี่ลัดวงจรบริเวณขั้วบวกและลบจนแบตเตอรี่หรือโทรศัพท์เสียหาย

หลักทั่วไป อย่าปล่อยให้แบตเตอรี่มีอุณหภูมิสูงหรือต่ำเกินไป (ต่ำกว่า 0C หรือสูงกว่า 45C) การเปลี่ยนแปลงอุณหภูมิอย่างรวดเร็ว อาจทำให้แบตเตอรี่มีอายุใช้งานสั้นลง

10. **การกระแทก** : ให้จับถือโทรศัพท์ด้วยความระมัดระวัง ป้องกันโทรศัพท์ : ถ้าโทรศัพท์ตกหรือถูกกระแทกอย่างแรง ชิ้นส่วนโทรศัพท์ที่เป็นกระจกอาจแตกหักได้ อย่าทำโทรศัพท์ตก อย่าให้หน้าจอโดนของมีคม

11. **ไฟฟ้าดูด** : อย่ารีอภายในโทรศัพท์ เนื่องจากมีความเสี่ยงจากไฟฟ้าดูดได้

12. การบำรุงรักษา : ใช้ผ้าแห้งทำความสะอาดอุปกรณ์ (อย่าใช้สารทำละลาย เช่นเบนซินหรือแอกฮอลล์)

13. ชาร์จไฟในที่ที่มีอากาศถ่ายเทได้ อย่าชาร์จไฟอุปกรณ์ด้วยการวางบนพื้นผิวที่นุ่ม

14. ความเสียหายต่อแถบแม่เหล็ก : วางโทรศัพท์ให้ห่างจากบัตรเครดิต เพราะข้อมูลบนแถบแม่เหล็กอาจเสียหายได้

15. อย่าใช้โทรศัพท์มือถือในที่ที่อุณหภูมิสูงหรือต่ำเกินไป อย่าให้โทรศัพท์โดนแสงแดดจัดหรืออยู่ในที่เปียกชื้น อุณหภูมิที่เหมาะสมอยู่ระหว่าง -10C ถึง +45C อุณหภูมิสูงสุดที่สามารถชาร์จได้คือ +40C

16. ด้วยข้อจำกัดทางด้านชิ้นส่วน ให้เชื่อมต่อโทรศัพท์มือถือเข้ากับ USB เวอร์ชัน 2.0 หรือสูงกว่าเท่านั้นไม่สามารถเชื่อมต่อกับ USB แบบกำลังไฟได้

17. จัดอุปกรณ์ให้ใกล้ตัวรับเพื่อความสะดวกถอดแปปเตอร์ไฟเมื่อใช้เสร็จ

18. ใช้ที่ชาร์จในรถเท่านั้น ที่ชาร์จรุ่น UD36A50100 ให้แรงดัน/กระแสไฟ 5.0V/1.0A

~ คำแนะนำการใช้งานที่สำคัญ

แบตเตอรี่ - ซิม - ไทรลูดิจิตอล - SAR - ช่อมแซม

1. ใช้ที่ชาร์จและแบตเตอรี่ของ WIKO เท่านั้น เพื่อให้แบตเตอรี่ของคุณมีอายุยืนยาว การใช้แบตเตอรี่ไม่ตรงรุ่นอาจทำให้ระเบิดในภายหลังได้

2. อย่าทิ้งแบตเตอรี่ในกองไฟ ให้ปฏิบัติตามคำแนะนำในการรีไซเคิลแบตเตอรี่และโทรศัพท์ที่ใช้แล้ว

3. อย่าทุบหรือทำลายแบตเตอรี่ เนื่องจากอาจทำให้ลัดวงจรภายใน และร้อนจัด

4. อย่าแกะแบตเตอรี่

5. แบตเตอรี่สามารถชาร์จซ้ำได้หลายร้อยครั้ง หากแบตเตอรี่มีอาการไม่เก็บไฟ ให้เปลี่ยนใหม่

6. หากคุณไม่ใช่โทรศัพท์เป็นระยะเวลานาน ให้ชาร์จแบตเตอรี่เป็นระยะเพื่อยืดอายุ

7. อย่าทิ้งแบตเตอรี่ร่วมกับขยะทั่วไป ให้รีไซเคิลตามคำแนะนำของผู้ผลิต ถ้าแบตเตอรี่เสียหายให้ติดต่อศูนย์บริการหรือตัวแทนจำหน่าย WIKO ที่ใกล้ที่สุด
8. ถอดที่ชาร์จออกจากผนังเมื่อชาร์จเต็มแล้ว เพื่อเป็นการประหยัดไฟ
9. อย่าชาร์จแบตเตอรี่ไว้นานเกินสัปดาห์ เพราะไฟอาจเกินพิกัดและอายุใช้งานสั้นลง
10. จับถือchimด้วยความระมัดระวัง : ถ้าchimสกปรกให้ใช้ผ้านุ่มเช็ด
11. การโทรฉุกเฉิน : สำหรับผู้ให้บริการบางราย ในบางพื้นที่และพื้นที่ไม่มีสัญญาณ อาจใช้เบอร์โทรฉุกเฉินไม่ได้ ขอให้ตรวจสอบกับผู้ให้บริการเป็นอันดับแรก
12. การได้รับคลื่นวิทยุ :
โทรศัพท์นั้นถูกออกแบบและผลิตขึ้นให้สอดคล้องกับข้อกำหนดระหว่างประเทศ (ICNIRP)¹ ว่าด้วยการได้รับคลื่นวิทยุ ข้อกำหนดนี้พัฒนาโดยหน่วยงานวิทยาศาสตร์อิสระจากการ

ศึกษาและวิจัยจำนวนมาก เพื่อความปลอดภัยของผู้ใช้โทรศัพท์เคลื่อนที่ทุกคน หน่วยวัดค่าการได้รับคลื่นวิทยุนี้เรียกว่า SAR (Specific Absorption Rate) กำหนดค่าสูงสุดที่ 2W/kg^* การทดสอบ SAR จะตั้งโทรศัพท์ในตำแหน่งตามมาตรฐาน

¹International Commission on Non-Ionising Radiation Protection

ถึงแม้ SAR จะเป็นการกำหนดระดับพลังงานสูงสุด แต่ค่า SAR ขณะใช้งานจริงค่าอาจต่ำกว่าค่าสูงสุดได้โทรศัพท์นี้ออกแบบมาให้ใช้พลังงานได้หลายระดับ โทรศัพท์จะใช้พลังงานเท่าที่จำเป็นในการเชื่อมต่อกับเครือข่ายเท่านั้น นอกจากนี้ โทรศัพท์ทุกรุ่นต้องผ่านการทดสอบข้อกำหนดของ European R&TTE ก่อนวางขายได้

ข้อกำหนดนี้ทำเพื่อรับประกันความปลอดภัยของผู้ใช้ และป้องกันความเสี่ยงต่อสุขภาพ

ค่า SAR สูงสุดที่วัดได้จากโทรศัพท์นี้คือ 0.534 W/kg ที่ตำแหน่งหู และ 0.716 W/kg ที่ตำแหน่งต่ำสุด 1.5 ซม. ห่างจากลำตัว ผ่านข้อกำหนดการได้รับคลื่นวิทยุเมื่อใช้ที่ตำแหน่งหู หรือตำแหน่งต่ำสุด 1.5 ซม. ห่างจากลำตัว ใช้การเชื่อมต่อเครือข่ายคุณภาพสูงเพื่อส่งไฟล์ ข้อมูลและข้อความ บางขณะการส่งไฟล์หรือข้อความอาจล่าช้า จนกระทั่งเชื่อมต่อใช้งานได้ ถ้าเกิดเหตุดังกล่าว ขอให้ยกอุปกรณ์ออกจากเพื่อให้เชื่อมต่อกันได้ ถ้าคุณใช้ของโทรศัพท์ หรือเคสเพื่อใส่โทรศัพท์ จะต้องไม่มีโลหะ และควรห่างจากลำตัว 1.5 ซม. เป็นอย่างน้อย

* ค่า SAR อุปกรณ์มือถือจำกัดที่ 2.0 วัตต์ / กิโลกรัมเป็นค่าเฉลี่ยต่อมวล 10 กรัมของเนื้อเยื่อ ค่า SAR อาจแตกต่างกันตามตามมาตรฐานการรายงานข้อมูลของแต่ละประเทศ

เทคนิคลดระดับความแรง

แนะนำให้ใช้โทรศัพท์ในพื้นที่ที่มีสัญญาณดี เพื่อลดปริมาณคลื่นที่แผ่เข้าสู่ร่างกาย หากอยู่บริเวณที่จอตลอดได้ดินหรือขณะเดินทางด้วยรถหรือรถไฟ แนะนำให้ใช้โทรศัพท์เท่าที่จำเป็น

ดูคุณภาพสัญญาณจากแถบบนโทรศัพท์ : แถบมาก แสดงถึงคุณภาพสัญญาณดีแนะนำให้ใช้ชุดหูฟัง เพื่อลดคลื่นที่แผ่เข้าสู่ร่างกายเพื่อลดผลกระทบจากคลื่นที่แผ่ออกมา วิจัยรุ่นควรถือโทรศัพท์ให้ห่างจากช่องท้องส่วนล่าง หญิงมีครรภ์ควรถือโทรศัพท์ให้ห่างจากกระเพาะอาหาร

13. ให้ส่งข้อมูลอุปกรณ์กับผู้ที่ได้รับอนุญาตจาก WIKO เท่านั้น การรับประกันของ WIKO ไม่ครอบคลุมโทรศัพท์ที่ซ่อมโดยผู้ที่ไม่ได้รับอนุญาตจาก WIKO

14. การบริการหลังการขายจะใช้รหัส IMEI เป็นหมายเลขระบุเครื่อง การดูรหัส IMEI มีหลายวิธีดังนี้ :

- กด * # 0 6 # บนแป้นโทรศัพท์
- ดูจากกล่องบรรจุภัณฑ์ที่มาับโทรศัพท์
- ถอดแบตเตอรี่ออก คุณจะเห็นป้ายมีรหัส IMEI (สำหรับโทรศัพท์ที่ถอดแบตเตอรี่ไม่ได้ ให้ดูป้ายที่ฝาหลัง)

หมายเหตุ

การรับประกันของ **WIKO** ไม่ครอบคลุมรอยขีดข่วนและการเสื่อมสภาพตามปกติ (แบตเตอรี่ จอภาพ แป้นพิมพ์ เล่นสื่อกำลัง ฯลฯ)

ข้อตกลงการใช้ข้อมูล

คุณสามารถลงทะเบียนโทรศัพท์ WIKO ได้ฟรี เพื่อให้วิศวกร WIKO ได้รับทราบรุ่นและคุณสมบัติทางฮาร์ดแวร์ของคุณได้ทันที กลับกันวิศวกรสามารถแจ้งเตือนคุณว่ามีการปรับปรุง แจ้งเตือนกรณีรุ่นนั้นมีปัญหา นอกจากนั้นบริการนี้จะทำให้เราแจ้งคุณได้ทันทีเมื่อมีวิธีแก้ไขปัญหา

โดยการลงทะเบียนโทรศัพท์ของคุณ คุณยอมรับว่า WIKO และวิศวกรสามารถรวบรวม บันทึก วิเคราะห์ และใช้ข้อมูลทางเทคนิค ข้อมูลการใช้ (และข้อมูลที่เกี่ยวข้อง) รวมถึงข้อมูลเกี่ยวกับอุปกรณ์ WIKO ข้อมูลซอฟต์แวร์ระบบและแอปพลิเคชันของคุณ ได้ไม่จำกัดเราเก็บข้อมูลนี้เป็นระยะเพื่อใช้ในการปรับปรุงซอฟต์แวร์ ใช้สนับสนุนผลิตภัณฑ์ และบริการที่เกี่ยวข้องกับซอฟต์แวร์ในเครื่องลูกค้า

WIKO สามารถใช้ข้อมูลนี้ได้โดยไม่ระบุตัวตนของลูกค้าเพื่อนำเสนอและปรับปรุงสินค้าหรือบริการเราไม่สามารถเข้าถึงข้อมูลและไฟล์ส่วนตัวของคุณจากบริการนี้

การลงทะเบียนโทรศัพท์ WIKO ต้องมีการเชื่อมต่ออินเทอร์เน็ตเป็นเวลาสั้นๆ ทำให้อาจเกิดค่าใช้จ่ายจากผู้ให้บริการของคุณ แนะนำให้คุณเชื่อมต่อ Wi-Fi เพราะเป็นการเชื่อมต่อที่ไม่จำกัดข้อมูล และรวดเร็วกว่า

ข้อมูลที่ได้รับจะถูกประมวลผลทางอิเล็กทรอนิกส์เพื่อเข้าถึงข้อมูลทางกายภาพโทรศัพท์ของคุณ ผู้รับข้อมูลคือ WIKO SAS ตามกฎหมายของ French Data protection Act (the Loi Informatique et Libertes of January 6, 1978 amended 2004) คุณมีสิทธิเข้าถึงและแก้ไขข้อมูลส่วนบุคคลที่ได้ส่งไประหว่างการลงทะเบียนให้ถูกต้อง คุณสามารถใช้สิทธินี้ด้วยเขียนถึง

WIKO SAS

1, rue Capitaine Dessemond

13007 Marseille

France

ด้วยกฎหมายเดียวกัน คุณสามารถปฏิเสธการประมวลผลข้อมูลส่วนบุคคลของคุณก็ได้

การใช้เคิล



ตาม European Directive 2002/96/EC สัญลักษณ์
ถังขยะขีดคร่อมที่เห็นในคู่มือนี้ หมายถึงขยะอุปกรณ์
ไฟฟ้าและอิเล็กทรอนิกส์ แบตเตอรี่และอุปกรณ์เสริม
จะต้องผ่านกระบวนการจัดการของเสีย
ตรวจสอบว่าคุณทิ้งโทรศัพท์ที่ไม่ต้องการแล้วลงในถัง

ขยะที่เหมาะสม หรือส่งคืนผู้ขายปลีก เพื่อช่วยลดผลกระทบต่อ
แวดล้อมและสุขภาพ ให้สอบถามข้อมูลการทิ้งอุปกรณ์เก่าจาก
สภาท้องถิ่น ผู้ขายปลีก และสมาคมผู้ผลิตระดับชาติ

« รายละเอียดและเงื่อนไขการรับประกันของผู้ผลิต
ดูได้ที่ www.wikomobile.com »

STATEMENT OF COMPLIANCE



We, WIKO SAS - 1, rue Capitaine Dessemond - 13007 - Marseilles - FRANCE,

here by declare that the SLIDE mobile

phone complies with the standards and provisions of the Directives.
SAFTY : EN 60950-1:2001+A11:2009+A1:2010+A12:2011 EN 50332-1:2000 EN 50332-2:2003 / EMC : EN 301 489-1
V1.9.2 EN 301 489-3 V1.4.1 EN 301 489-7 V1.3.1 EN 301 489-17 V2.1.1 EN 301 489-34 V1.3.1 EN 61000-3-2:2006/A2:2009
EN 61000-3-3:2008 EN 300 440-1 V1.6.1 EN 300 440-2 V1.4.1 / SAR : EN 50360:2001 EN 62209-1:2006 EN 62209-2:2010
EN 62311:2008 / RADIO : EN 301 511 V9.0.2 (2003-03) EN 300 328 V1.7.1 (2006-10) EN 301 908-1 V5.2.1 EN 301 908-2 V5.2.1

The procedure for the Statement of Compliance, set out in Article 10.5 of Directive 1999/5/EC, was conducted under the supervision of the following organisation:

PHOENIX TESTLAB GmbH, Königswinkel 10
D-32825 Blomberg, Germany
www.phoenix-testlab.de
Phone +49(0)5235-9500-0 / Fax +49(0)5235-9500-10

CE 0700

The full text of the device's Statement of Compliance is available on written request to the following address:

WIKO SAS - 1, rue Capitaine Dessemond - 13007 - Marseilles - FRANCE

05/06/2014

(Date)

Laurent DAHAN / CEO

(Name and signature of the authorised official)

TH



SHARE YOUR IDENTITY

WIKO SAS

1, rue Capitaine Dessemond
13007 Marseille

FRANCE

www.wikomobile.com

สอบถามข้อมูลเพิ่มเติมได้ที่

ศูนย์ลูกค้าสัมพันธ์ (Wiko Call Center) : โทร. 0-2640-3600

เลขที่ 9 อาคารกคินท์ ชั้นที่ 9 ห้องเลขที่ 901 ถนนรัชดาภิเษก แขวงดินแดง
เขตดินแดง กรุงเทพมหานคร 10400 Email: service@wikomobile.co.th



การฟังเพลงด้วยระดับความดังสูงสุดติดต่อกัน
เป็นเวลานานส่งผลเสียต่อความสามารถในการ
ฟังของผู้ใช้



SLIDETM

Quick guide

The contents of this manual may differ in certain respects from the description of your phone depending on its software version and your telephone operator.

EN

CONGRATULATIONS!

You have just purchased your **WIKO SLIDE** mobile phone. This guide contains all the information needed to use the phone so that you can quickly familiarise yourself, we hope, with the world of WIKO.

Copyright © 2014 WIKO

www.wikomobile.com

The information provided in this manual may not be transmitted, reproduced or distributed in any form whatsoever without the written consent of WIKO.

Registered Trademarks

WIKO is a registered trademark of WIKO.

Notice

WIKO reserves the right to modify the information contained in this guide at any time.

This guide has been produced with the utmost care.

However, the information and advice herein do not represent a guarantee of any kind.

Limitation of Liability

The entire content and services accessible through this device are the exclusive property of third parties and are therefore protected in law (copyright, patents, licences and other intellectual property laws). These services are reserved for your personal use and not for commercial use. This content or these services may not be exploited without submitting a written request to the content owner. You may in no way copy, publish, transfer, sell or operate on any medium the content or services published by means of this device or generate derivative forms thereof.

THIRD PARTY SERVICES AND CONTENT ARE DELIVERED «AS IS». WIKO DOES NOT GUARANTEE THE CONTENT AND SERVICES SO DELIVERED, EITHER EXPRESSLY OR IMPLICITLY, FOR ANY PURPOSE

WHATSOEVER AS WELL AS WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. WIKO DOES NOT GUARANTEE THE ACCURACY, VALIDITY, LEGALITY OR EXHAUSTIVENESS OF THE CONTENT OR SERVICES PROVIDED BY THIS DEVICE. WIKO SHALL NOT BE LIABLE FOR NEGLIGENCE, WHETHER IN CONTRACT OR IN TORT, FOR ANY DIRECT, INDIRECT, INCIDENTAL OR SPECIAL DAMAGES, LEGAL FEES, EXPENSES OR ANY OTHER DAMAGE ARISING FROM USE OF THE CONTENT OR SERVICES BY YOURSELF OR BY A THIRD PARTY EVEN IF WIKO HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH INCONVENIENCES. AS SOME COUNTRIES DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTY OR LIMITATIONS ON THE LEGAL RIGHTS OF CONSUMERS, IT IS POSSIBLE THAT THESE EXCLUSIONS AND LIMITATIONS MAY NOT APPLY TO YOU.

Third party services may be interrupted or terminated at any time. WIKO makes no representations or warranties over time regarding the availability of any content or service. WIKO has no control over the content and services transmitted by third parties via networks or transmission devices.

WIKO expressly disclaims all liability for any interruption or suspension of a service or content provided by this device without restricting the general scope of this limitation of liability.

WIKO may in no circumstances be liable for the customer service associated with the content and services. Any questions or inquiries concerning the content or services should be sent directly to the supplier of the relevant content or services.




What's in the Box :

1. WIKO SLIDE mobile phone
2. AC adaptor
3. Micro USB cable
4. Battery
6. Hands-free kit
6. Quick guide

Getting to Know Your Phone




~ The buttons on your phone

Button	Function
On/Off	Press and hold the button to turn the phone on or off. Press the button lightly to lock the touch screen.
Home 	Returns to the home screen and opens the list of recent applications (press and hold the button).
Menu 	Displays the options menus available on the active application.
Return 	Returns to the previous screen.Closes the onscreen keyboard.
VOLUME +/-	Increases or decreases the call volume, the ringtone, music, games and other audio functions. Switch the ringtone to silent mode when the phone rings. Press and hold on Volume- to enable the meeting profile.

Getting Started

- Inserting the SIM Cards


SLIDE: The back cover of the phone is clipped on. Please unclip it using the notch on the cover, following the contour of the phone. Insert the SIM cards following the diagram below.

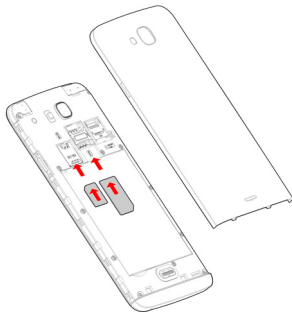

~ Installing the Battery

Note: only use batteries, chargers and accessories approved by WIKO.

Put the battery into its slot by aligning the phone and battery contacts, then press lightly on the battery to fit it into place.

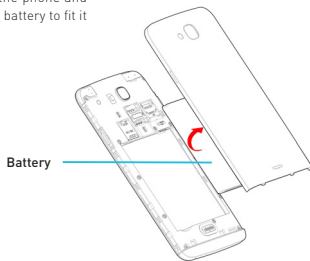

~ Charging the Battery


A flashing red light indicates that the battery level is very low: the battery should be recharged because, if the level is too low, it may shorten the life of the battery.

Connect the charger to a power outlet and the micro USB connector to the phone's USB port.

The phone's status indicator changes to red, indicating that the device is charging.

Once the phone has finished charging, the status indicator changes to green and you should unplug the charger.

For more information, refer to the [Safety Information section](#).

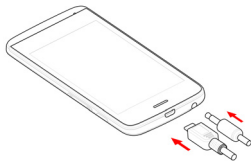


~ Installing the Memory Card

Your phone takes a MicroSD memory card of up to 32GB.

To install a memory card, turn the phone off then remove the back cover and take the battery out. Now insert the memory card in the slot.

Memory-card slot

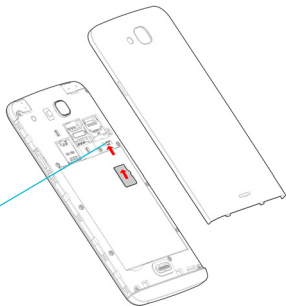

~ Turning the Phone On and Off

To turn the phone on, press on the ON/OFF button and hold it down until the phone begins to vibrate.

If your SIM card is locked, you must enter the correct PIN code to unblock the SIM card when the phone is powered up. Your PIN is supplied by your operator; if you did not receive it or have lost it, please contact them.

When the PIN is entered incorrectly three times, the mobile phone is blocked and has to be unblocked using your PUK (this is supplied with the SIM card; if this is not the case, you should contact your phone operator).

To turn the phone off, press and hold the ON-OFF button until the menu opens, then press on *Switch Off*. Now press *OK* to confirm.

The phone vibrates when it is shut down completely.

Basic Operations

~ SIM Management

When you turn on your phone for the first time, various items of information about the SIM card(s) are displayed. You are asked whether you want to modify the settings for calls, messages and the internet connection.

SIM1 is configured as the default SIM card for data connection.

If you are happy with the default settings, press on *Close*. If not, press on *Select* and the **SIM management** menu will be brought up. Now you can :

1. Personalise the information on the SIM cards in **SIM INFO**. The background colour serves to differentiate the two SIMs in the menus using the SIMs.


2. Set the **default SIM*** for voice and video calls, SMS/MMS and internet data connection.

**You can still choose a different SIM when performing*


an action, such as before making a call or sending an SMS/MMS: drag the notifications panel to the bottom of the screen and press on the SIM you want. The default SIM will be underlined. If you choose «always ask», an icon will appear next to the signal strength when you go to the SMS/MMS and call menu.

~ Network Connection

The first time the phone is turned on, or when you change SIM card(s) and re-start the phone, the Access point settings menu will be brought up. Press on *Select*.

Press on the name of the SIM card to display the list of access points. Choose the one that matches your operator's by pressing on the button on the right, then press on RETURN  to go back to the previous menu.

- **APN Not Available**

If your operator does not appear in the list or the list is empty, ask your operator how to configure the APN manually. To do this, press on the menu button, then *New APN* and enter the information provided by your operator. Press on the MENU  button again and choose *Save*. Return to the previous menu, then choose the APN that you have just saved.

- **Enabling Data Connection**

To check your data connection settings :

1. Go to *Settings* → *WIRELESS & NETWORKS* → *More...* → *Mobile networks* → *Access point names*, then enable the access point according to your operator/package.

2. Return to the previous **mobile network settings** menu, then press on *Data connection* and press on the name of your SIM card to enable it.

*You can also drag the notifications panel downwards to enable a data connection.

- **3G Service**




If you have two SIM cards inserted, only one of them can be enabled to receive the 3G service. You are advised to enable SIM1 for the best performance. If you want to change SIM, go to *Settings* → *WIRELESS & NETWORKS* → *More...* → *Mobile networks* → *3G service* → *Enable 3G*.












- **Data Roaming**




Note that for roaming SIM cards, you must enable the **data roaming** in the *Settings* → *SIM management* → *BASIC SETTINGS* → *Roaming menu*. Otherwise, the internet connection will be disabled by default.

~ Notifications

Notification icons on the status bar

-  Signal strength
- G** Connected to GPRS
- E** Connected to EDGE
- 3G** Connected to 3G
- H** Connected to HSPA (3G+)
- H+** Connected to HSPA+ (3G++)
-  No signal
- R** Roaming
-  Wi-Fi available

-  Connected to Wi-Fi
-  Bluetooth enabled
-  GPS in use
-  Voice call in progress
-  Call waiting
-  Missed call
-  Synchronising
-  New mail
-  Alarm on
-  Silent mode on
-  New voicemail


-  Downloading
-  Connected to computer
-  Battery level
-  New SMS or MMS
-  Airplane mode on

Depending on the application, notifications may be accompanied by a beep, vibration or a flashing LED.


Notifications Panel

Drag the status bar downwards to see details of all your notifications, slide your finger up on any part of the home screen. Information about new messages received, upcoming calendar events, download status,

etc. will then be displayed. The name of the operator is shown at the bottom of the panel.

Press on  to clear all temporary notifications (applications that are running are still listed).

Drag a notification to the left or right to clear it.

To close the panel, drag it upwards or press on RETURN .

To access the settings panel, press on .

Shortcut : pull the notification downwards with two fingers.

~ Using the Menus

The menus on your phone take the form of a contextual menu or an options menu.

Contextual Menu

To bring up a contextual menu, press and hold on an item on the screen: the contextual menu then suggests various actions associated with the item. For example, if you press and hold on an SMS, the options for the message are displayed.

Note : not all items have a contextual menu. When you press and hold on an item that does not have a menu, nothing will happen.

Options Menu

To bring up an options menu, press on the MENU 

button. The options menu suggests actions or settings for the current screen or application but not for a specific item as is the case for the contextual menu.

Note : some screens do not have options menus.

Safety Information

Please read this safety information carefully so that you can use your phone in complete safety :

1. Children : Be very careful with children and your phone.

A mobile phone contains a number of detachable parts. Exercise great care when children are in close proximity to the phone. The phone contains small parts that could be swallowed or cause choking. If your phone is equipped with a camera or lighting device, do not use it too near children or animals.

2. Hearing : Prolonged listening at full power using a lightweight headset or headphones can damage your hearing. Reduce the volume to the lowest possible level when listening to music or conversations. Avoid high volumes over extended periods.

3. Driving : Exercise care when driving. Driving requires maximum attention at all times in order to

minimise the risk of accidents. Using a mobile phone can distract the user and result in an accident. You must fully comply with the local regulations and laws in force regarding the use of cell phones whilst driving. You are not allowed to use the phone whilst driving. A hands-free kit should not be regarded as an alternative solution.

Flying : Turn your phone off when flying.

Remember to turn your phone off when you are in a plane (GSM + Bluetooth) as it may cause interference.

4. Hospitals : Turn your phone off near any medical devices.

It is extremely dangerous to leave a phone switched on near medical devices as it may cause interference. You must observe any instructions or warnings in hospitals and treatment centres.

Remember to turn your phone off in **service stations**. Do not use your device in a petrol station near fuel.

It is dangerous to use your phone inside a **professional garage**.

5. Electronic implants and pacemakers: Users who wear a pacemaker or who are fitted with an electronic implant must hold the phone on the opposite side to their implant as a precaution when making a call.

If you notice that your phone is causing interference with a pacemaker, switch it off immediately and contact the manufacturer of the pacemaker for advice on what action to take.

6. Fire hazard: Do not leave your device near heat sources such as radiators or cookers.

Do not leave your phone charging near flammable materials as there is a real risk of fire.

7. Contact with liquid: Do not expose the phone to liquid or touch it with wet hands: any damage caused by water may be irreparable.

8. Use only WIKO-approved accessories. The use of unauthorised accessories may damage your phone or cause a safety risk.

9. Do not destroy the batteries and chargers.

Never use a battery or charger that has been damaged.

Keep batteries away from magnetic objects as the latter might cause a short-circuit between the positive and negative terminals of your batteries and permanently destroy the battery or phone.

As a general rule, you should not expose the batteries to very high or low temperatures (below 0°C or above 45°C). Differences in temperature may reduce battery autonomy and service life.

10. Shocks and impact: Handle and use your phone with the utmost care.

Protect your phone: shocks and impact may damage it. Some parts of your phone are made from glass and might break if the phone is dropped or is subject to severe impact. Avoid dropping your phone. Do not touch the screen with sharp objects.

11. Electric shock: Do not try to dismantle your phone as there is a very real risk of electric shock.

12. Maintenance: If you want to clean your handset, use a dry cloth (do not use a solvent, such as benzene, or alcohol).

13. Recharge your phone in a well ventilated area. Do not recharge your device when it is resting on a soft surface.

14. Damage to magnetic strips: Keep your phone away from credit cards as they may damage the data on the magnetic strips.

15. Do not use the mobile phone in the environment at too high or too low temperature, never expose the mobile phone under strong sunshine or too wet environment. The suitable temperature for the phone is -10°C to +45°C, the maximum charging temperature declared by the manufacturer is +40°C.

16. Due to the used enclosure material, the GSM mobile phone shall only be connected to a USB Interface of version 2.0 or higher. The connection to so called power USB is prohibited.

17. The power adapter is the disconnect device for this equipment. The socket-outlet shall be near the equipment and easily accessible.

18. This charger is for indoor use only, the charger type is UD36A50100, output voltage/current is 5.0V/1.0A.

~ Important operating guidelines

Batteries - SIM - Emergency calls - SAR - Repairs

1. To increase the life of your battery, only use WIKO chargers and batteries. Replacing the battery with a non-compliant model may result in the latter exploding.

2. Never throw batteries on a fire and follow the guidelines in force for recycling used batteries and phones.

3. Be careful not to crush or damage the battery, as this could cause an internal short circuit and overheating.

4. Do not take the battery apart.

5. The battery can be recharged several hundred times before needing to be replaced. When it shows signs of losing its power, it can be replaced.

6. If you do not use your mobile phone for an extended

period, remember to recharge the battery to optimise its use time.

7. Do not throw batteries away with household waste: recycle them in accordance with the manufacturer's guidelines. If the battery is damaged, contact the after-sales service or the nearest authorised WIKO dealer.

8. Unplug the charger from the wall socket when the battery is fully charged in order to reduce your energy consumption.

9. Do not leave the battery being charged for more than a week as this might result in an overload and reduce the life of the product.

10. Handle the SIM cards with care : wipe them with a soft cloth if they appear dirty.

11. Emergency calls : the emergency numbers may not be accessible on all mobile telephone networks, in isolated areas or areas where there is no coverage; check first with your operator.

12. Radio Frequency Exposure :

Your mobile phone has been designed and manufactured in accordance with the international guidelines (ICNIRP¹) on exposure to radio frequencies. These guidelines, which are based on various studies and research, have been developed by independent scientific organisations to ensure the safety of everyone who uses a mobile phone.

The safety information on exposure to radio waves uses a unit of measurement known as SAR (Specific Absorption Rate). The international guidelines have set this limit at 2W/kg*. The phone is used in standard operating positions when being tested for its SAR.

¹International Commission on Non-Ionising Radiation Protection

Although the SAR is determined using the highest power level, the phone's real rate of specific absorption whilst in operation may be well below the maximum value.

A phone is designed to operate at different power lev-

els so that it only uses the power it needs to be connected to the network.

In addition, all models of phone must undergo tests before being marketed to ensure compliance with the European R&TTE directive.

This directive publishes strict rules for guaranteeing the safety of users and for preventing any risks to health.

The maximum SAR value tested on this device when used in its normal position at the ear is 0,534 W/kg and 0.716 W/kg when used close to the body, at a minimum distance of 1.5 cm. It complies with the rules on exposure to radio frequencies when used in its normal position at the ear or at a minimum distance of 1.5 cm from the body. The device uses a high-quality network connection for transmitting files, data and messages. On occasion, the transmission of files or messages may be delayed until the connection is available. When this is the case, be sure to follow the instructions re-

garding the separation distance for establishing the transmission. If you use a case, belt-clip or holder for carrying the phone, it must not contain any metal and should be kept at a minimum distance of 1.5 cm from your body.

*The SAR limit for mobile devices is 2.0 watts / kilogram (W/kg) averaged over ten grams of body tissue. SAR values may vary according to the standards for reporting information that are in force in different countries.

Tips for Reducing Exposure Levels

We recommend that you use your phone in good reception conditions in order to reduce the amount of radiation received. It is advisable to limit the amount of time you use the phone in underground car parks and when travelling by car or train, etc.

Reception conditions are indicated by the bars that are displayed on your phone : the more bars there are, the better the reception quality.

We recommend that you use the hands-free kit to reduce exposure to radiation.

To reduce the adverse effects of prolonged radiation exposure, we advise teenagers to hold the phone away from their lower abdomen, and that pregnant women hold the phone at a distance from their stomach.

13. Only qualified service personnel should repair your device. If you give your device to non-qualified personnel for repair, the phone will not be covered by WIKO's warranty.

14. The IMEI code is the serial number used to identify your device and for After-Sales support. There are several ways of finding your IMEI code:

- Type * # 06 # on your mobile telephone's keypad.
- Refer to the packaging box that your telephone came in.
- Remove the battery from your device: on the back, you will see a label with your IMEI code. (For non-removable batteries, refer to the label on the telephone's rear casing)

NOTE

WIKO's warranty does not cover normal wear and tear (batteries, screens, keyboards, camera lenses, etc.).

Data Use Agreement

Registering your WIKO phone is a free service offered by WIKO that allows our engineers to connect to your phone's physical data so that they can tell what your model and hardware specifications are in real time. In return, the engineers can keep you informed of updates that are available for your system and warn you in case of a recognised technical failure on a model or series. In addition, this service allows us to alert you instantly if there is a malfunction so that we can provide a technical solution as soon as possible.

By registering your phone, you acknowledge that WIKO and its engineers are able to collect, store, analyse and

use diagnostic, technical and usage data (and related data) including, without limitation, data regarding your WIKO device, your software system and your applications. We will collect this information on a regular basis to facilitate the provision of software updates and product support and miscellaneous services offered to customers (where applicable) relating to the software on your device.

WIKO may use this information without revealing the identity of the customer in order to offer and improve its products or services for the user.

This service will not give us access to your content and personal files.

You need to be connected to the mobile internet network for a short time to register your WIKO phone. This may result in connections costs, at your expense, depending on the nature of your contract with your mobile operator. We recommend that you use a Wi-Fi connection, as with this type of connection there is no

data limit (if your phone service limits the exchange of data) and the connection is quicker.

The information obtained is processed electronically in order to access the physical data on your phone. **The data recipient is WIKO SAS.**

In accordance with the French Data Protection Act (the Loi Informatique et Libertés of January 6, 1978, amended in 2004), you have the right to access and correct personal information submitted during registration. You may exercise this right by writing to WIKO SAS at 1, rue Capitaine Dessemond, 13007 Marseilles, FRANCE.

You may also, for legitimate reasons, oppose the processing of your personal data.

~ Recycling



The symbol of a crossed-out wheellie-bin, as found in this manual, indicates that the item is subject to European Directive 2002/96/EC, which states that electrical and electronic equipment, batteries, accumulators and accessories must undergo selective waste management.

Make sure that, when your phone is no longer usable, you put it in a suitable waste bin or return it to a mobile phone retailer. In this way you will help to reduce environmental and health hazards.

Local councils, retailers and national manufacturing associations will give you the necessary information on how to dispose of your old device.

«The details and conditions of our manufacturer warranty are available on www.wikomobile.com»

STATEMENT OF COMPLIANCE



We, WIKO SAS - 1, rue Capitaine Dessemond - 13007 - Marseilles - FRANCE, here by declare that **the SLIDE mobile phone** complies with the standards and provisions of the Directives.

SAFTY : EN 60950-1: 2001+A11 :2009+A1 :2010+A12 :2011 EN 50332-1:2000 EN 50332-2:2003 / **EMC** : EN 301 489-1 V1.9.2 EN 301 489-3 V1.4.1 EN 301 489-7 V1.3.1 EN 301 489-17 V2.1.1 EN 301 489-34 V1.3.1 EN 61000-3-2:2006/A2:2009 EN 61000-3-3 :2008 EN 300 440-1 V1.6.1 EN 300 440-2 V1.4.1 / **SAR** : EN 50360: 2001 EN 62209-1: 2006 EN 62209-2: 2010 EN 62311: 2008 / **RADIO** : EN 301 511 V9.0.2 [2003-03] EN 300 328 V1.7.1[2006-10] EN 301 908-1 V5.2.1 EN 301 908-2 V5.2.1

The procedure for the Statement of Compliance, set out in Article 10.5 of Directive 1999/5/EC, was conducted under the supervision of the following organisation:

PHOENIX TESTLAB GmbH, Königswinkel 10
D-32825 Blomberg, Germany
www.phoenix-testlab.de
Phone +49[0]5235-9500-0 / Fax +49[0]5235-9500-10

CE 0700

The full text of the device's Statement of Compliance is available on written request to the following address :

WIKO SAS - 1, rue Capitaine Dessemond - 13007 - Marseilles - FRANCE

05/06/2014

[Date]

Laurent DAHAN / CEO

[Name and signature of the authorised official]

EN



SHARE YOUR IDENTITY

WIKO SAS

1, rue Capitaine Dessemond
13007 Marseille

FRANCE

www.wikomobile.com

Customer service information
Wiko call center : +662-640-3600

9 Pakin Building, 9th Floor, Room No.901,
Ratchadaphisek Road, Din Daeng, Bangkok 10400



Prolonged listening to the music player
at full power may damage the user's
hearing.